Dell OptiPlex GX260 Hard Drive Replacement

This guide will show you how to remove the hard drive.

Written By: Kevin Schapansky

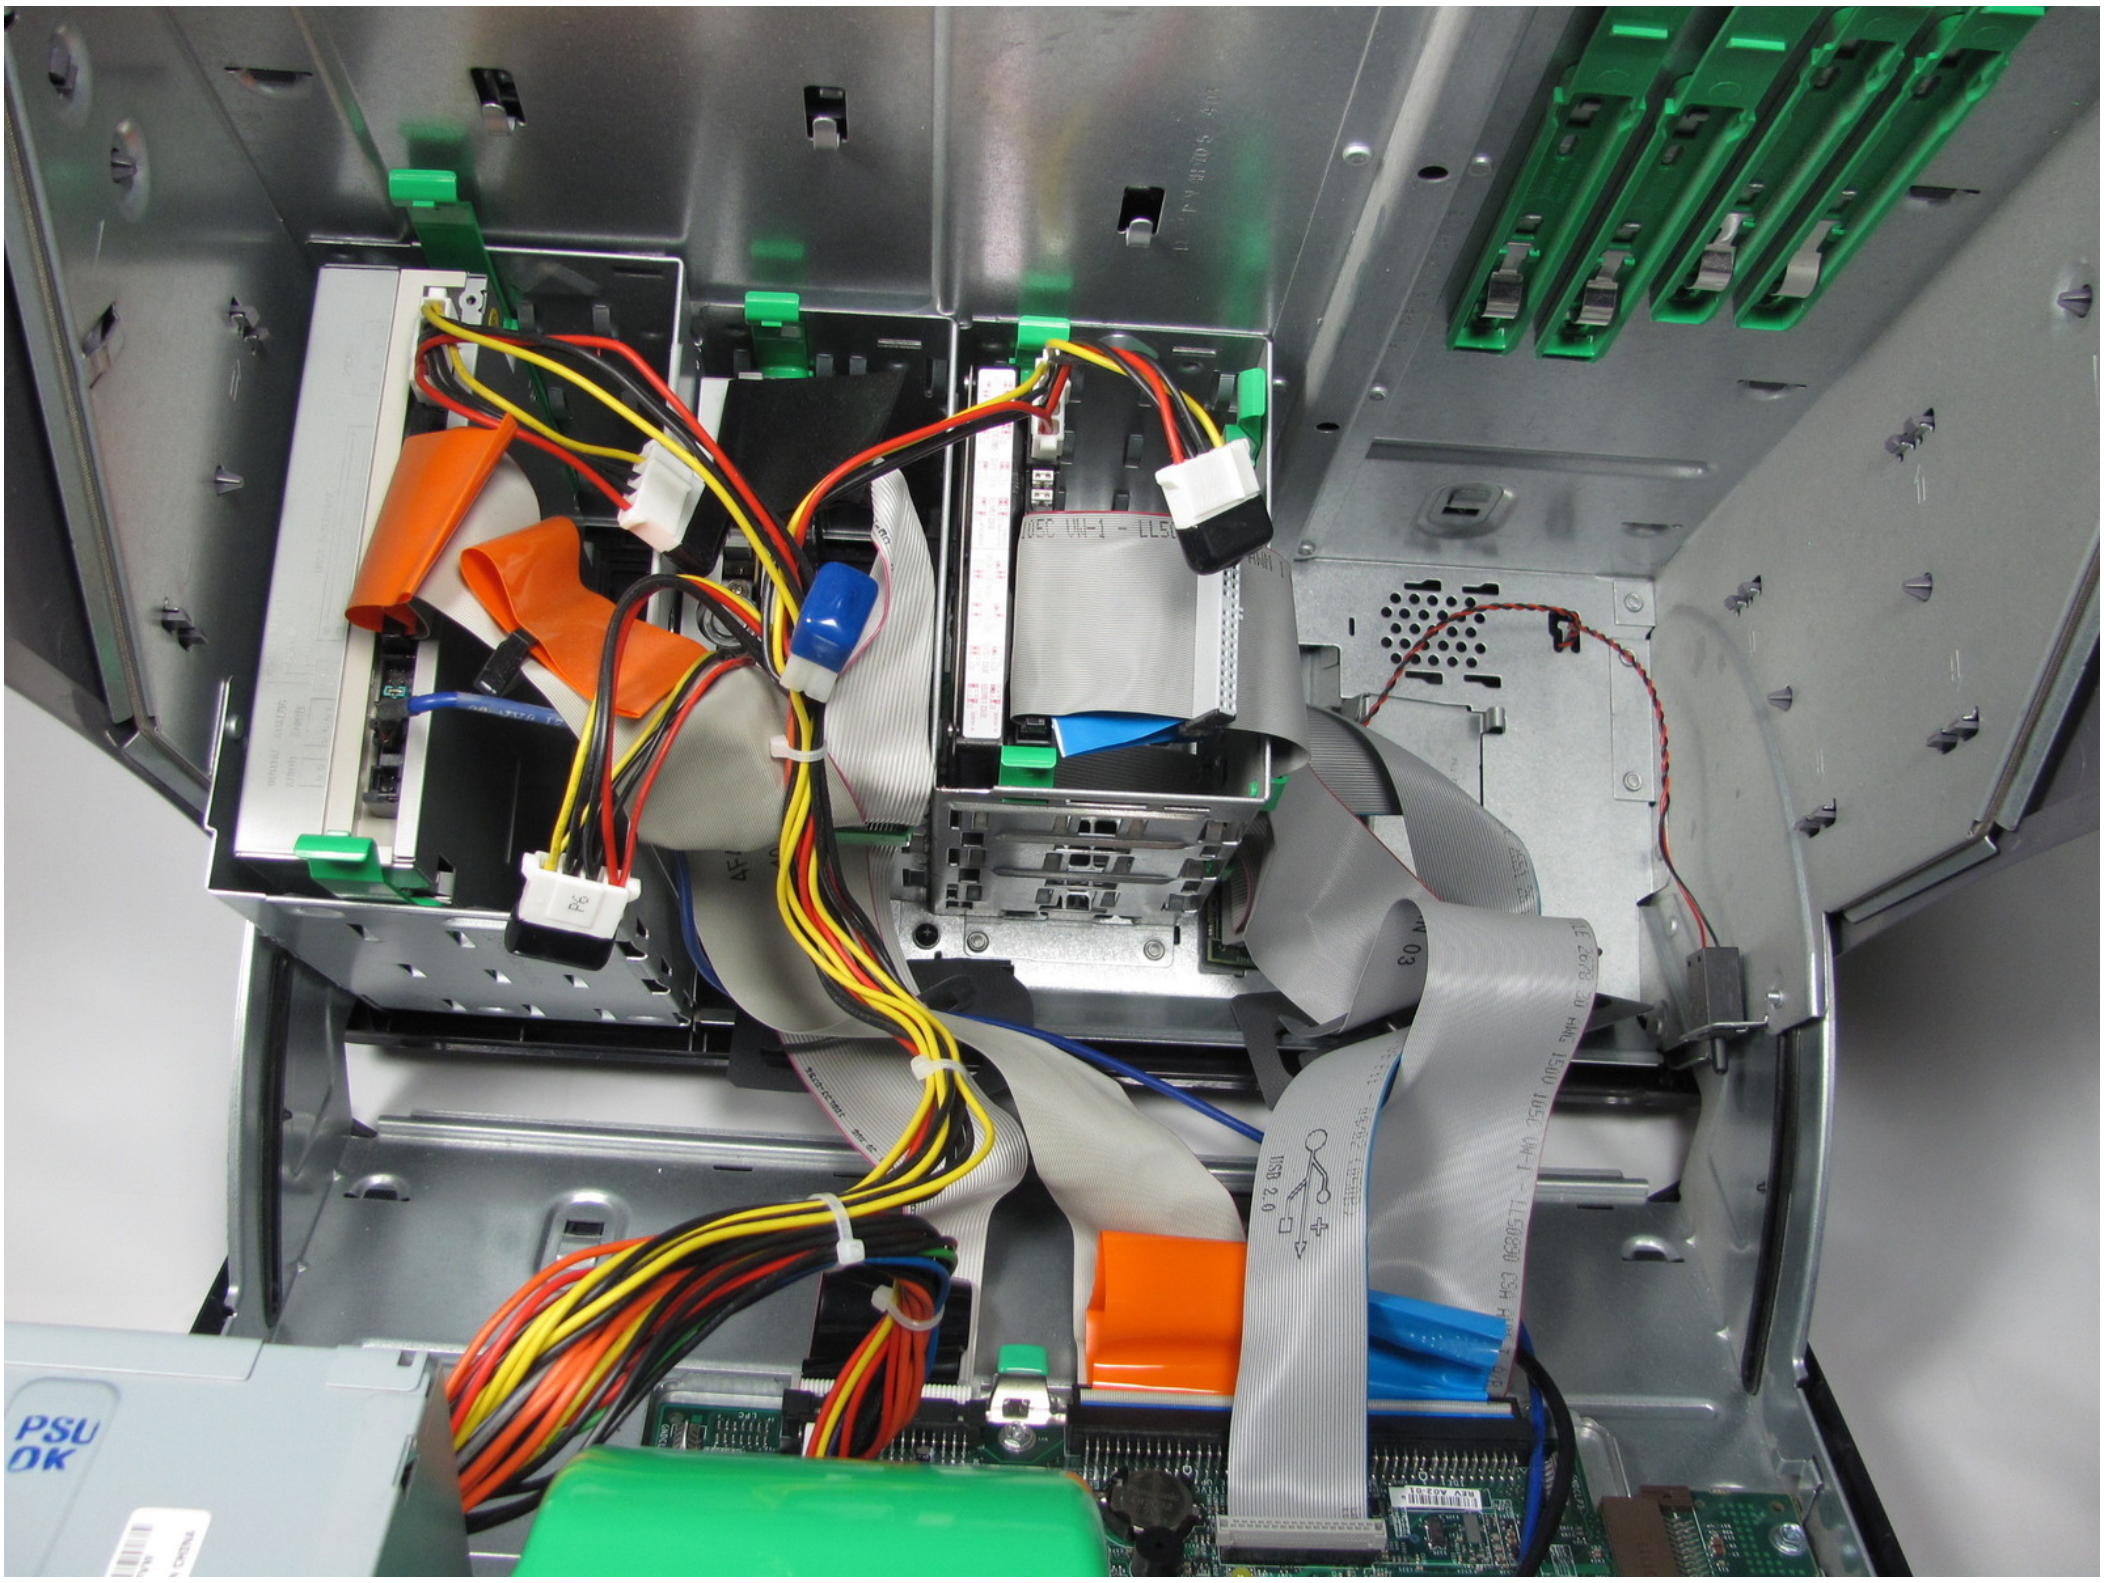

© iFixit — CC BY-NC-SA

Step 1 — Case

- Lay the Dell Optiplex GX260 down on a clean flat surface with the rear towards you.
- Push the oval shaped buttons located on the top and bottom of the PC simultaneously and lift the case straight up.

Note: Some force may be required to push in the oval buttons open the PC case.

© iFixit — CC BY-NC-SA

Step 2 — Hard Drive

- Identify the Hard Drive in the case.
- If there is more than one hard drive installed the process is the same for each hard drive.
- Remove the power cable from the hard drive by squeezing the side tabs in and pulling gently.
- Remove the IDE cable from the hard drive by gently pulling the ribbon cable out.

Step 3

- Pinch the two green tabs inwards to release the hard drive and lift it out.

To reassemble your device, follow these instructions in reverse order.